




## Montagehinweis Ausbau Radlager CSP-Bremse

### Assembly instructions for wheel bearing removal CSP brake



Für den Ausbau des Radlagers bei CSP-Bremsen empfehlen wir einen Radlagerabzieher.

We recommend using a wheel bearing puller to remove the wheel bearing on CSP brakes.

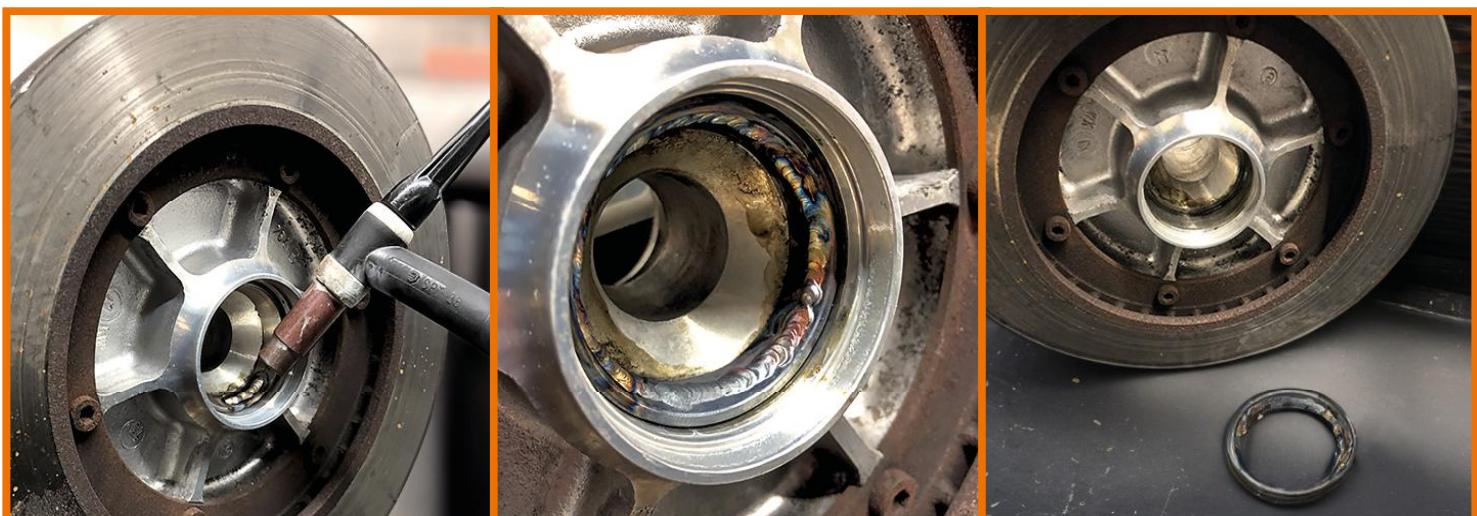

Für den Fall, dass Sie keinen Auszieher zur Hand haben, gibt es die Möglichkeit, mit Hilfe eines Schweißgerätes eine „geschlossene Naht“ auf die innere Lauffläche des Radlagers zu schweißen. Durch die Naht schrumpft der Außendurchmesser der Lagerschale und lässt sich somit einfach entnehmen.

Vor dem Schweißen der zweiten Lagerschale muss die Nabe vollständig abgekühlt sein. Reinigen Sie sorgfältig den Lagersitz, bevor das neue Lager eingepresst wird.

In case such tool is not on hand, there is a quick'n'dirty way to remove the race:  
Gently make a 360° weld as shown in the picture above on the bearing race. This will shrink the race in diameter and when the alloy hub is flipped over it will just fall off. The hub will heat up during you weld the race, but due to the size and volume of the alloy hub it will not get damaged.

Just remove one bearing and do the second side when the hub has been cooled down. Carefully clean the seats in the hub, before pressing in new wheel bearings.

